



1.GENERAL INFORMATION

GENERAL INFORMATION

SERIAL NUMBER -----	1-1
PECIFICATIONS -----	1-2
SERVICE PRECAUTIONS -----	1-3
TORQUE VALUES-----	1-11
SPECIAL TOOLS-----	1-12
LUBRICATION POINTS-----	1-13
CABLE & HARNESS ROUTING -----	1-16
WIRING DIAGRAM (OFF ROAD) -----	1-20
WIRING DIAGRAM (ON ROAD)-----	1-21
TROUBLESHOOTING -----	1-22


1.GENERAL INFORMATION

SERIAL NUMBER

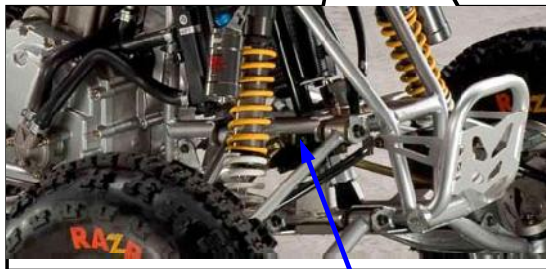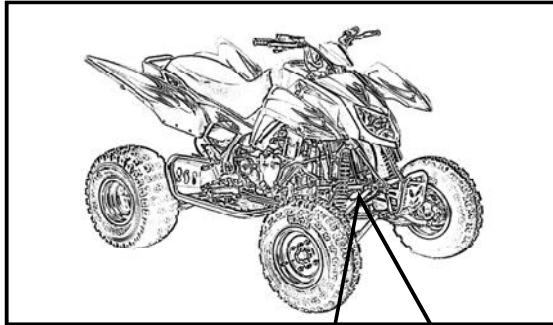

(1)

(1) Location of Frame Serial Number
(Vehicle Identification Number)

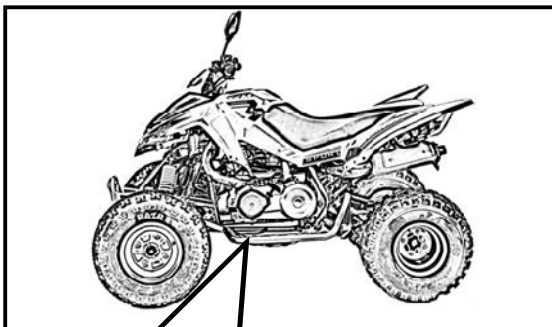


(2)


(2) Location of Engine Serial Number

1.GENERAL INFORMATION

CABLE & HARNESS ROUTING

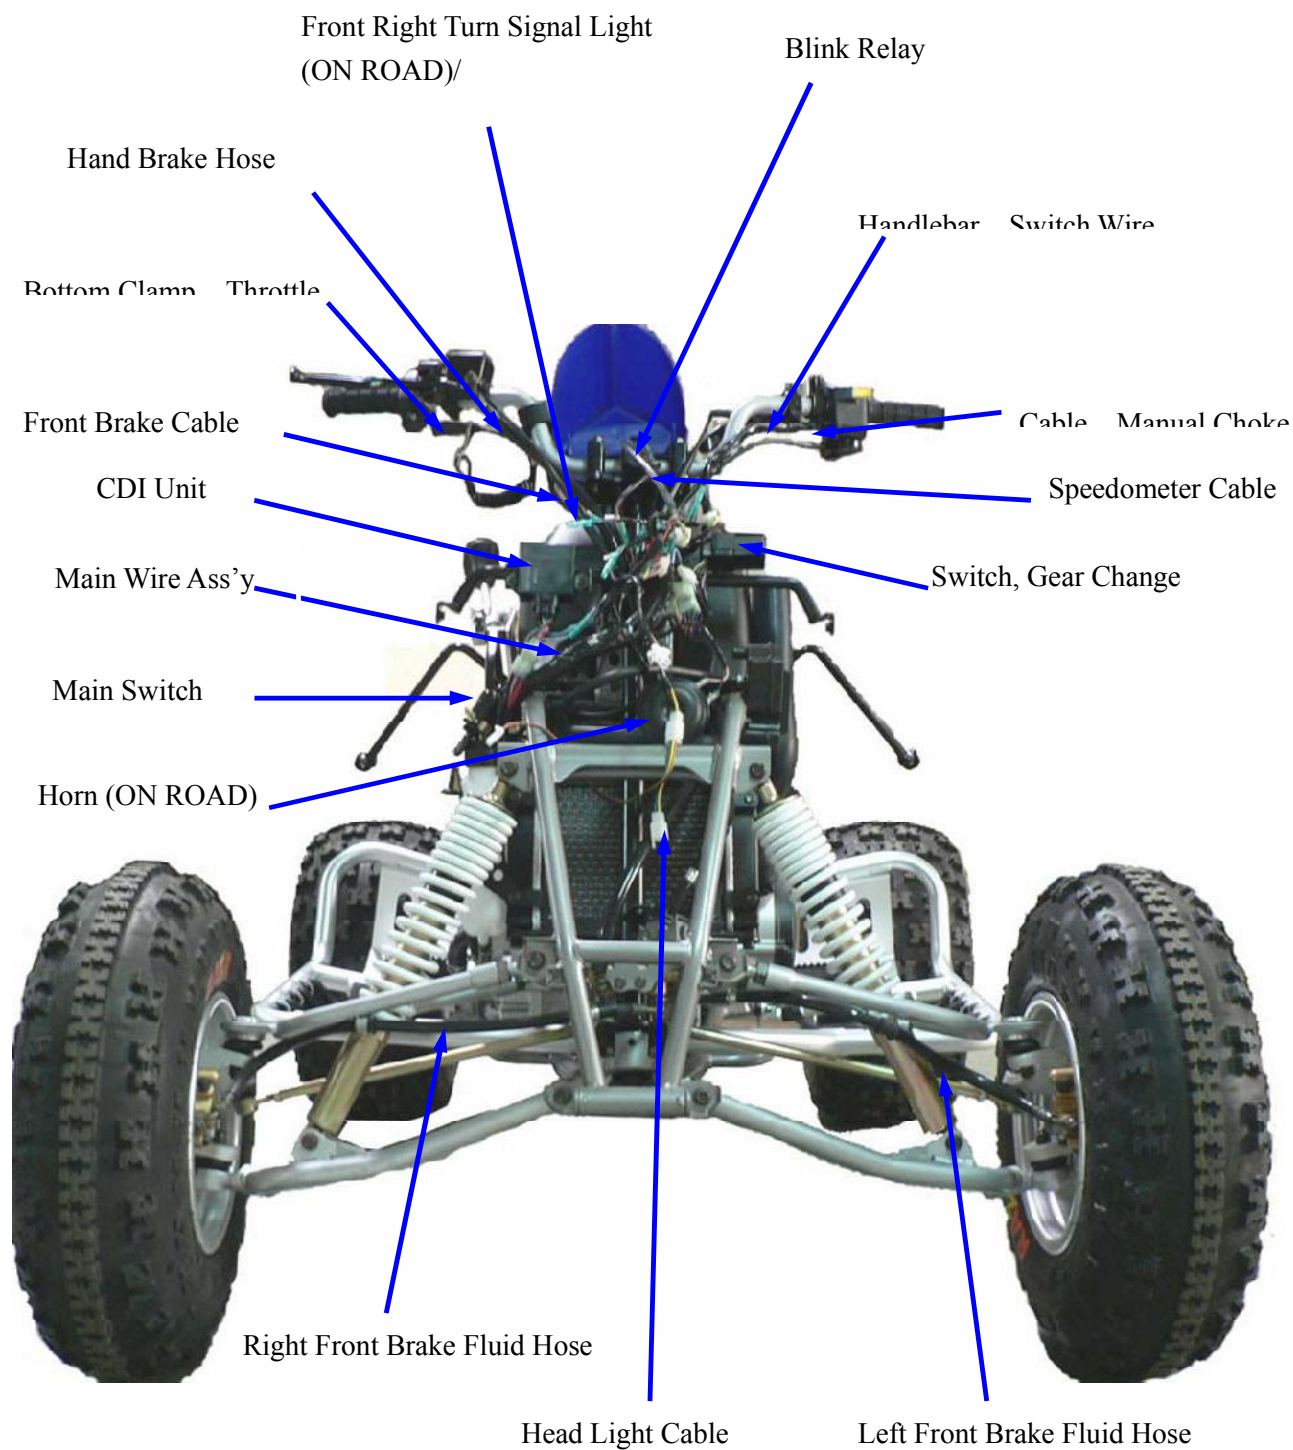

1.GENERAL INFORMATION

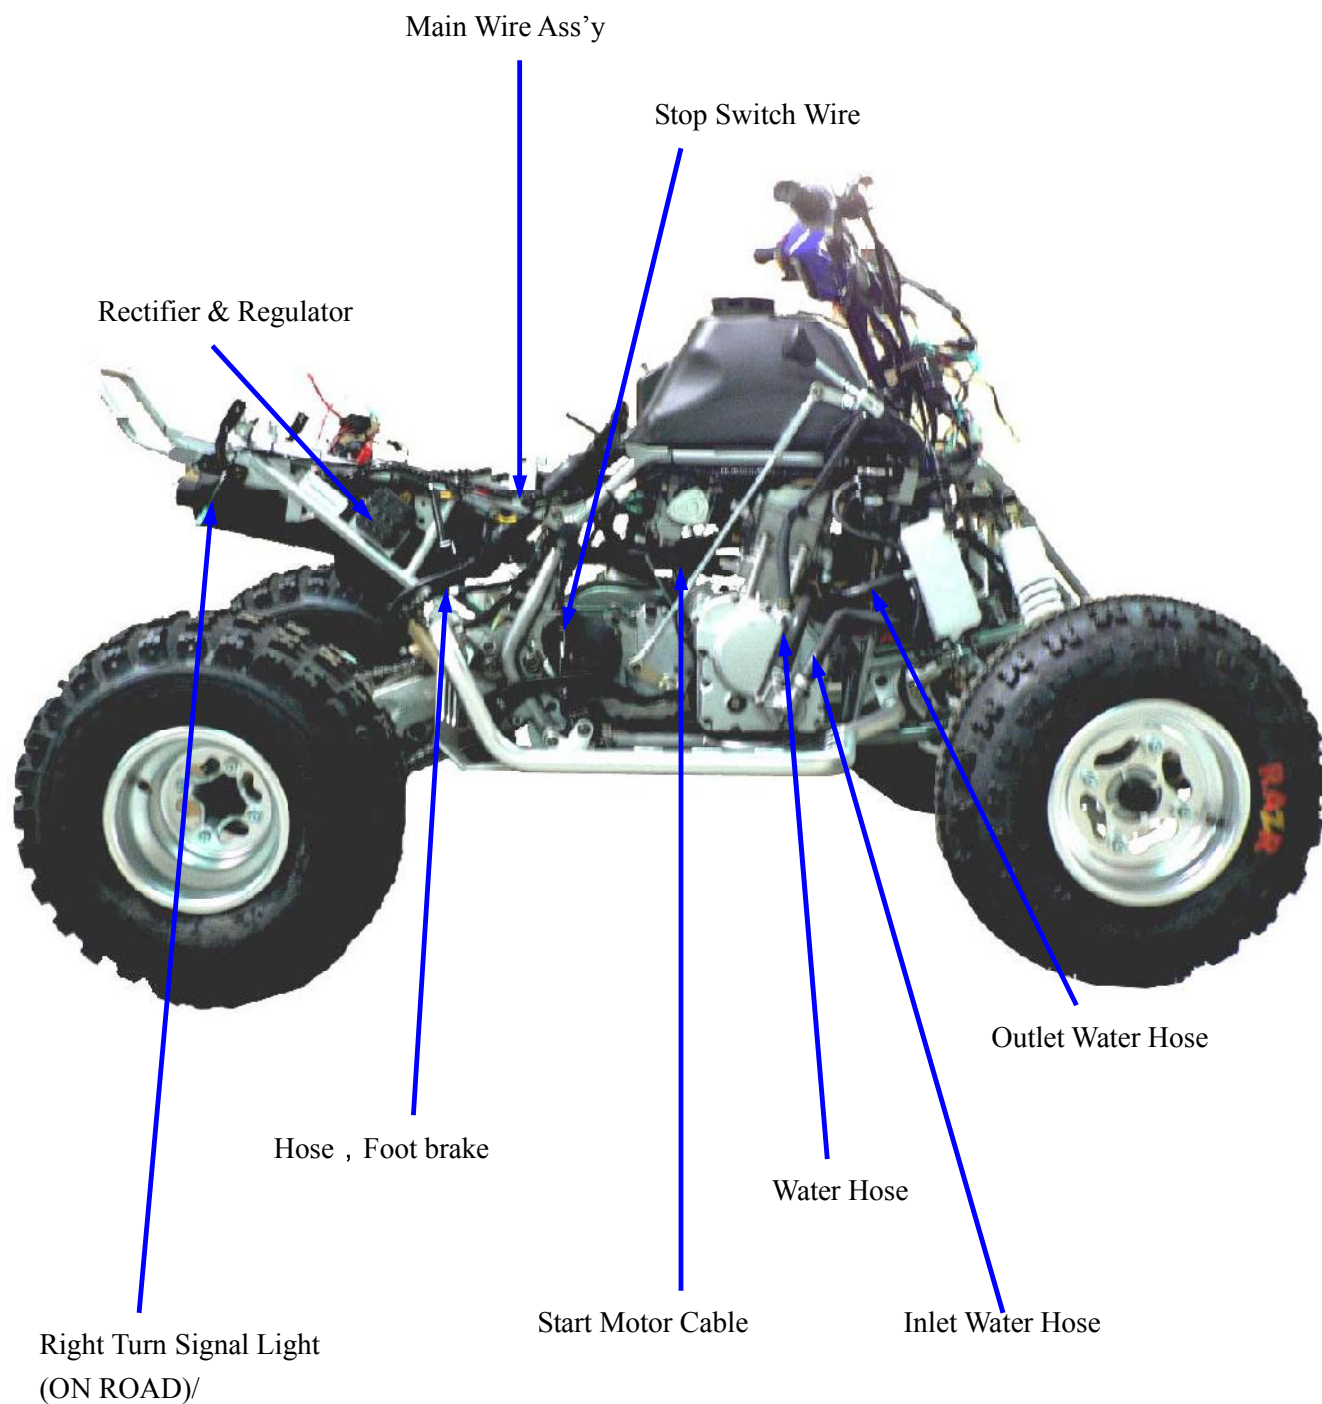


9.DRIVE AND DRIVEN PULLEYS

LEFT CRANKCASE COVER REMOVAL

Remove the four bolts.

Remove the pull starter cover.

Bolts

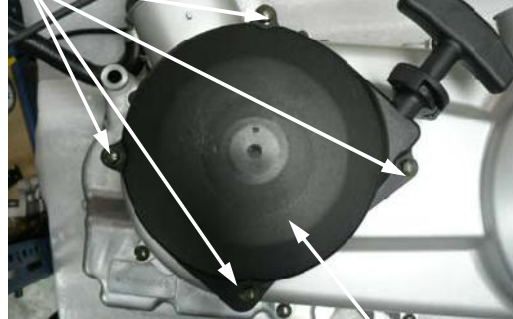

pull Starter Cover

Remove the gasket.

Gasket



Disconnect drive belt air inlet and outlet hose
from left crankcase cover (see page 6-5)

Remove the left crankcase cover bolts and
left crankcase cover.

Remove the gasket and dowel pins.

Bolts

